



**Instruction Supplement
2009 and Later Harley Davidson
Touring Models**

IMPORTANT INFORMATION



WHEN INSTALLING THESE SHOCKS FOR USE WITH HARLEY DAVIDSON DETACHABLE ACCESSORIES, SUCH AS SISSY BARS AND RACKS, THAT UTILIZE THE TOP SHOCK MOUNT.

YOU MUST INSTALL THESE PROGRESSIVE SUSPENSION SHOCKS WITH THE ROD END UP (SPRING ADJUSTER AT THE BOTTOM) AS SHOWN BELOW.

Contents; #1 Four (4) ½" Washers
#2 Four (4) Shouldered ½" Sleeves

Insert a Shouldered Sleeve (#2) into each shock eye with the shouldered portion facing inward towards the frame/swingarm. From the shock-bolt in, the correct order should be ½" washer (#1), shock-eye with shouldered sleeve installed (#2) - shoulder facing inward towards frame, and finally into frame/swingarm.

Torque the shock bolts to 35-40 ft-lbs.

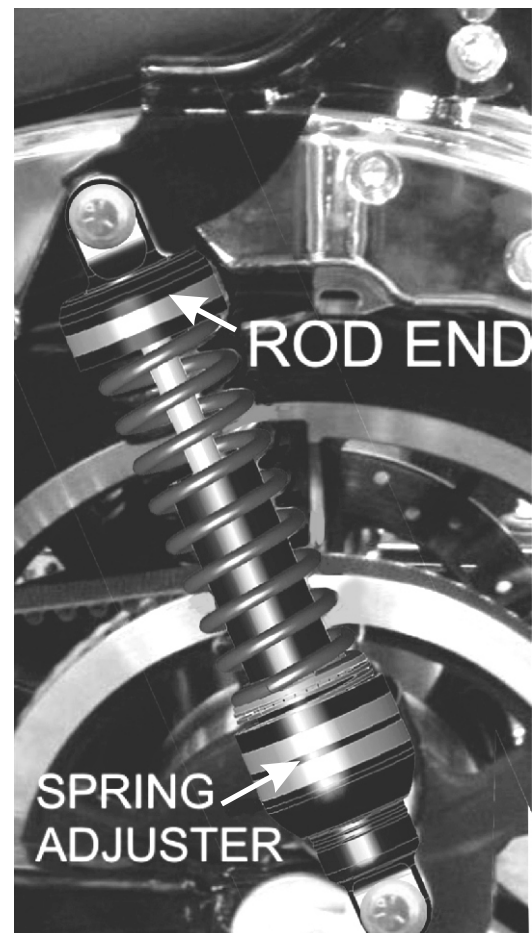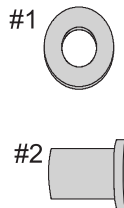

**FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE ACCESSORY
AS WELL AS BINDING AND DAMAGE TO THE SHOCKS!**