



Pro Pipe Collector Heat Shield

Part #26521

Please follow the installation instructions below and if you have any questions, feel free to call our technical help line (562) 926-5291.

INSTALLING YOUR NEW VANCE & HINES COLLECTOR HEAT SHIELD

1. Remove the megaphone from your exhaust header.
2. Remove the header from the motorcycle.
3. On a large towel or other suitable material to avoid scratching, lay the collector heat shield face down. Using a felt tip pen, mark the top edge of the heat shield with the location of the mounting clips that are welded to the backside.
4. Set the exhaust collector into the collector heat shield.
5. Unscrew the hose clamps (supplied) until they are completely loose. Feed the tail end of the hose clamps into the clips. Be sure that each hose clamp is engaged with the clips.
6. With the collector heatshield aligned as in figure 1 tighten the clamps.
7. Reinstall your Vance & Hines exhaust system.

NOTE: Installation instructions can be found on our web site or you may receive a copy by calling our tech line.

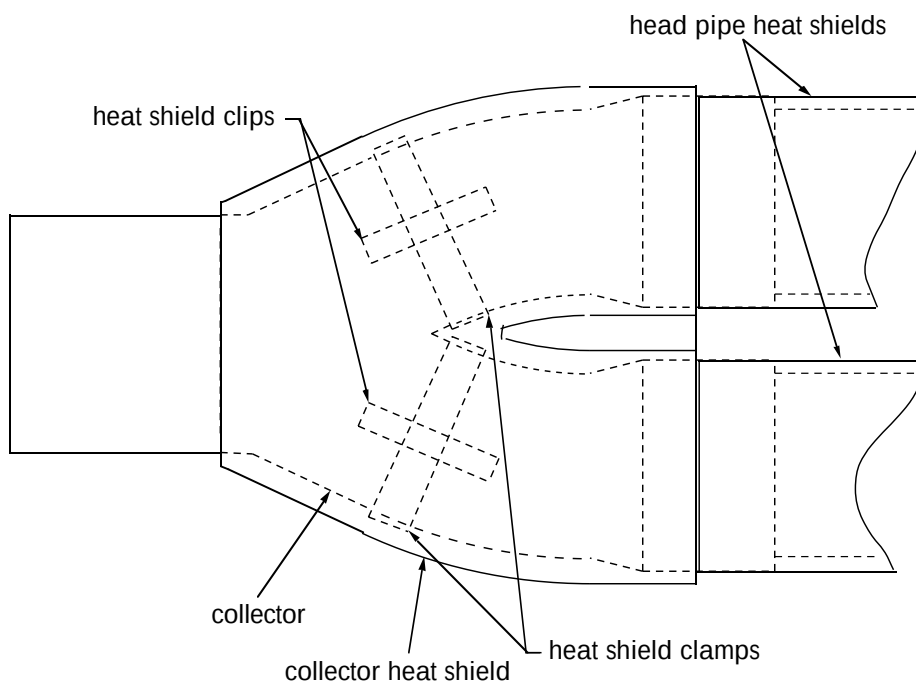


Fig 1